



Alexander
Party Rentals
An Alexander's U-Rent Company
1127 Andover Park W., Bldg D
Tukwila, WA 98188
(206) 282-1987 Phone (206) 283-4545 Fax

ELECTRIC TABLETOP DEEP FAT FRYER OPERATING INSTRUCTIONS

WARNINGS: Hot fats and hot surfaces can cause severe burns. Use caution when operating the fryer. Do not attempt to move the fryer filled with hot fat. Drain hot fat into metal containers.

ELECTRICAL HOOKUP:

The EL120 is supplied with a standard 120V line cord and requires a 15 amp 120V outlet.

PREPARING FRYER:

- Always use a top grade commercial liquid shortening or oil with a high smoke point and resistance to break down. This will result in longer fat life and better tasting food.
- Pour in shortening up to the fat level line stamped on the rear of fry tank.
- **VERY IMPORTANT:** If solid shortening is used be certain the shortening is **PRE-MELTED**. If not, pack shortening tightly around heating elements. Set the thermostat dial to 200°F and add shortening until enough is melted to reach the FAT level line on the rear of the tank.

OPERATION:

After shortening is in tank, set thermostat dial to recommended temperature and allow fryer to preheat. The **amber pilot light** will come on during the short preheating period and go out when preset temperature is reached. You are now ready to start frying.

During frying the heating elements are energized periodically while the thermostat maintains the selected temperature. Turbulence is created above the heating elements, while the sediment space beneath is comparatively undisturbed. Fat expansion is approximately 15 % from room temperature to 400° F.

CAUTION: Keep the fat level above the top of the elements at all times.

Whenever possible, drain and dry food before frying. Excessively moist food breaks down shortening, hydrolyzing fat and releasing fatty acids. Such fats soon begin to smoke and their frying value is greatly diminished.

Load fry baskets uniformly to one half and never more than two-thirds of their capacity. Overloading always results in an improperly cooked product. Save frying time by lowering baskets into fat immediately after amber pilot light goes out. At this time fat is at the peak of the temperature cycle.

Allow foods to cook until done, or leave longer for extra browning. When food is cooked, lift baskets out of fat and hang them on the basket supports to drain.

During slack periods, turn fryer off or at least reduce thermostat to 200° F. You will get much better mileage out of your shortening that way.

High Limit Control If, due to a defective thermostat, the temperature of fat continues to rise; the high limit control automatically shuts off the heating element. When this happens, the **red pilot light** on the control panel comes on. If the high limit control should activate, turn off thermostat and allow fryer to cool. Then press red reset button on the back of the control panel, set thermostat back to desired temperature and resume frying. If high limit control reactivates, stop using and call Alexander Party Rentals at (206) 282-1987.

AFTER USE:

- Turn off power, remove fry baskets, and wait for fat to cool to a safe handling temperature.
- Raise heating element to half position to drain for a few minutes; then raise them fully upright until they lock in place.
- Carefully remove fry tank (use gloves or pot holders) and drain fat into an appropriate container; do not use plastic or glass containers for hot fat or oil.