



**POPCORN MACHINE
OPERATING INSTRUCTIONS
Model 2660**

**WARNING: THIS MACHINE REQUIRES A DEDICATED 20 AMP OUTLET!
DO NOT USE AN EXTENSION CORD WITH THIS MACHINE!**

ELECTRICAL HOOKUP:

Make sure machine is on a sturdy, level surface. Verify that all 3 switches are off and plug machine directly into a 20 AMP outlet.

PREPARING POPPER:

Turn all 3 switches on:

- LIGHT/WARMER which turns on the heat to the bottom pan and the heat lamp.
- KETTLE MOTOR which operates the agitator in the kettle.
- KETTLE HEAT which heats the kettle.

OPERATION:

ALL-IN-ONE PACKAGED POPCORN: WARNING: POP ONLY ONE BAG AT A TIME!

- When ready to begin popping, cut bag along top dotted line for the oil, salt, and popcorn and load all into the kettle. Each package makes enough for six 1oz servings.
- When the corn is finished popping, gently dump the kettle. NEVER LEAVE MACHINE UNATTENDED WHILE POPPING.
- Immediately reload with another bag and continue until 3 – 5 batches have been popped.
- Turn off KETTLE HEAT and KETTLE MOTOR switches until ready to begin new cycle of batches.
- To make unsalted popcorn from a package, leave out the salt by not cutting that section open.

OTHER POPCORN: Measure the following amounts into the kettle:

- Oil (coconut oil is the preferred oil): 2oz.
- Corn: 6oz.
- Flavacol (or other salt/flavoring mix): 1 Tablespoon

Follow directions above.

WARNING: NEVER LEAVE THE HEAT ON WHEN NOT POPPING!

When popping the last kettleful, turn the heat off when the popcorn starts forcing the lid open. This will reduce smoke and save energy.

AFTER USE:

- Allow machine to cool down before cleaning or moving.
- Remove left-over popped corn.
- Slide out lower catch tray to dump partial and un-popped corn then replace tray.
- Place scoop in machine for return.